


Configurar ROUTER NEXXT


Debemos tener la computadora conectada por WIFI o por cable al Router (en un puerto amarillo, NO en el que dice WAN y luego debemos abrir cualquier navegador de internet "Internet Explorer, Google Chrome o Firefox" y en la barra de dirección escribimos la dirección **192.168.0.1** y le damos a la tecla Enter, si no entra con esa dirección probar **192.168.30.1**

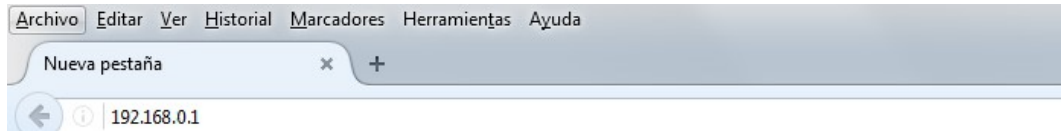

Te pedirá contraseña, entonces pones **admin** y aceptas



Ahora si es que lo está configurando por primera vez, debe hacer lo que indica la siguiente imagen. Seleccionamos Dynamic IP y abajo ponemos el nombre y la clave del wifi. Eso es todo.

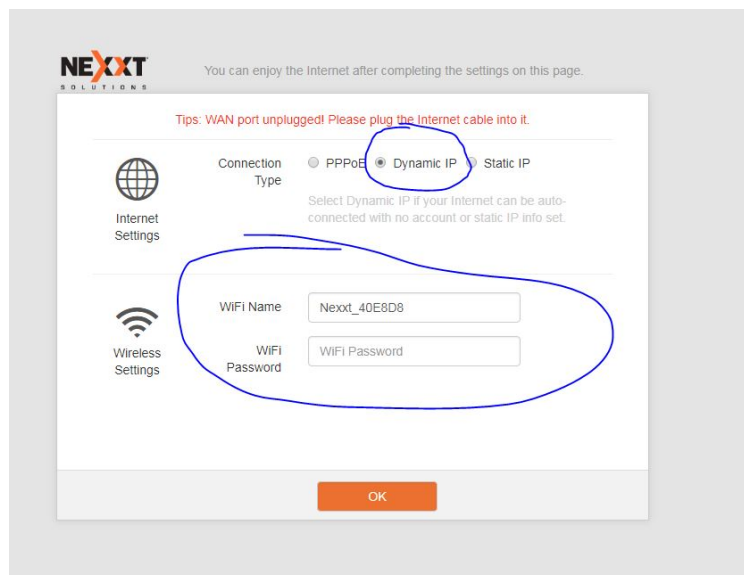

“Continuar leyendo la siguiente página”

Si desea cambiar la clave y/o ocultar su red puede seguir la siguiente imagen:

The image shows the NEXXT Solutions web interface for configuring wireless settings. The interface includes a sidebar menu on the left with options like Status, Internet Settings, **Wireless Settings** (highlighted with a red box and a green '1'), Bandwidth Control, Wireless Repeating, Parental Controls, Advanced, and Administration. The main content area is titled 'WiFi ON/OFF' and contains several sections: 'WiFi Name and Password', 'WiFi Schedule', and 'WPS'. In the 'WiFi Name and Password' section, the 'WiFi Name' field contains 'NombreDelWifi' and the 'WiFi Password' field contains 'ClaveDelWifi'. Both fields are highlighted with red boxes and green numbers '2' and '3' respectively. A green circle highlights the 'Hide WiFi' checkbox, which is currently unchecked. A green arrow points from this checkbox to a green text box on the right that reads: 'Si tildamos esta opcion, el nombre de tu Wifi se oculta'. At the bottom right, the 'OK' button is highlighted with a red box and a green number '4'. The 'Cancel' button is also visible. The top left corner features the NEXXT SOLUTIONS logo, and the top right corner has a 'Logout' link. A small URL 'm/mail/u/0/#inbox' is visible in the bottom left corner.